

Fitting Instructions

Fitting Difficulty

Revo OEM+ Intake Upgrade Kit 2.0 TSI S1



Contents

Contents	
Revo Air Filter	1
Revo Hose	1
70-90 Hose Clamp	1
50-70 Hose Clamp	1

Recommended Tools

Tools	Size
Ratchet	
Extension	
Socket	7mm
Torx Bits	T20
Constant Tension Pliers	



Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.



Fitting Instructions

Fitting Difficulty




Revo OEM+ Intake Upgrade Kit 2.0 TSI S1

- 1 Remove the OE intake hose by releasing the hose clamps at the turbo and airbox.



- 2 Disconnect the vacuum hose and remove the airbox lid with a T20 torx bit.

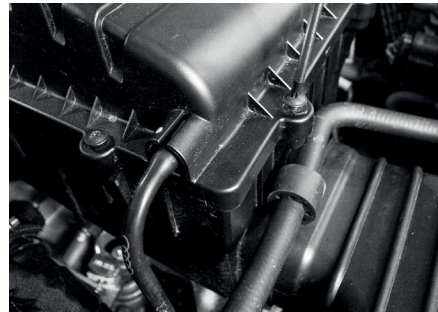

- 3 Remove the OE air filter from the airbox. Including the plastic deflector plate. The airbox should be empty.



- 4 Install the Revo air filter, as shown.

- 5 Refit the airbox lid, ensuring it is correctly fastened. Reconnect the vacuum hose.



- 6 Install the new Revo intake hose using the hose clamps provided. Note: do not overtighten.

- 7 Test drive the vehicle to ensure vehicle performs correctly and there are no leaks/part interference during operation. Your installation is now complete!