

# Fitting Instructions

Revo Intake Upgrade Kit 2.5 TFSI TTRS (8J)

Fitting Difficulty



Dealer Fit Recommended

## Contents

Description	
Revo Intake Pipe	1
Revo Air Filter	1
Revo Coupling Hose	1
Revo Heat Shield	1
Heat Shield Support Bracket Front	1
Heat Shield Support Bracket Middle	1
Heat Shield Support Bracket Rear	1
Extension Post Bracket	1
Intake Pipe Bracket	1
Breather Pipe	1
90-110 Hose Clamp	2
25-30 Hose Clamp	2
M6 Nylock Nut	4
M6x16 Bolt	5
M6x20 Bolt	1
M6 Washer	11
M6 Spring Washer	2

## Recommended Tools

Tools	Size
Ratchet	
Sockets	
Spanner	
Torx Bits	
Hex Key	



Before starting, please ensure that the battery is disconnected and you have ensured the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.



# Fitting Instructions

Revo Intake Upgrade Kit 2.5 TFSI TTRS (8J)

Fitting Difficulty



Dealer Fit Recommended

- 1 Remove the engine cover. Loosen the intake hose clamp at the turbo inlet coupler and remove the OE pipe fixing bolts.



- 2 Loosen the 2 x hose clamps and remove the breather pipe. Remove the 2 x torx bolts and remove the air intake.



- 3 Remove the hex bolt. Firmly pull the airbox upwards to release from the mounting grommets. Remove the airbox and intake pipe assembly from the vehicle and place aside.



- 4 Install the Revo intake pipe into the turbo intake coupler hose. Install the intake pipe mounting bracket using a M6 bolt, washer and spring washer. Bolt the bracket to the spare M6 threaded hole in the cylinder head. Install the breather pipe and hose clamps. Refit the engine cover. Adjust the intake pipe and bracket to ensure there is sufficient clearance around the intake pipe and tighten the hose clamps.



# Fitting Instructions


Revo Intake Upgrade Kit 2.5 TFSI TTRS (8J)

Fitting Difficulty



Dealer Fit Recommended

- 5 Off the vehicle take the heat shield and fit the heat shield mounting brackets, as shown.

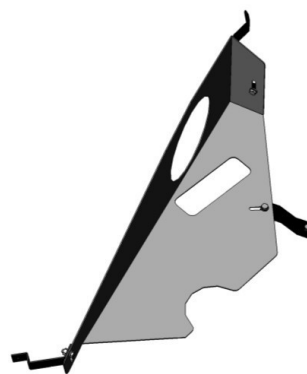

- 6 Install the extension post onto the back of the bonnet catch. Fit the front bracket to the extension post using a M6 washer and M6 nylock nut.



- 7 Undo the nut on the red power terminal located on the suspension turret and fit the rear heat shield bracket onto the stud and refit the nut. Place the middle heat shield bracket onto the original airbox mounting and secure using the OE bolt. Leave all brackets slightly loose to allow for adjustment.



- 8 Install the Revo intake joiner hose and hose clamps.



# Fitting Instructions

Revo Intake Upgrade Kit 2.5 TFSI TTRS (8J)

Fitting Difficulty




Dealer Fit Recommended

- 9 Install the Revo air filter.



- 10 Adjust the heat shield brackets and intake joiner hose to ensure sufficient clearance around the intake system. Tighten all hose clamps and bracket fixings.

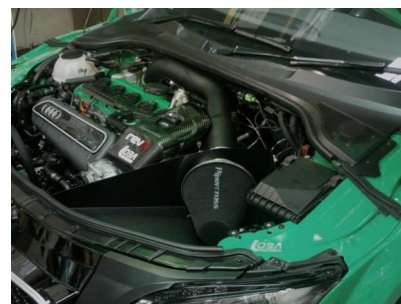

- 11 Check everything has been correctly tightened and correctly reinstalled. Test drive to ensure the vehicle performs correctly and there are no leaks/part interference during operation. Your installation is now complete!

