

# Fitting Instructions

Revo Sound Suppressor Kit 2.3 Focus RS MK3 EcoBoost

Fitting Difficulty



### Contents

Description	Quantity
Revo Machined Inlet	1
Revo Silicone Cover	1
25-40 Hose Clamp	1

### Recommended Tools

Tools	Size
Ratchet	
Sockets	7mm
Torx Bits	T30
Circlip Pliers	
Flat Head Screwdriver	



Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.




# Fitting Instructions

Fitting Difficulty



## Revo Sound Suppressor Kit 2.3 Focus RS MK3 EcoBoost

- 1 Raise the vehicle to gain access to the underside. Note: it is easier to remove the undertray to allow for better access, but it is not essential.

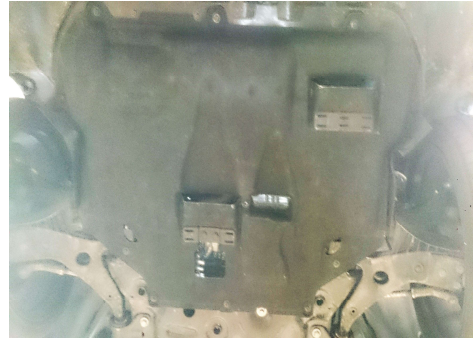

- 2 Remove the circlip with pliers then remove the OE unit from the turbo.



- 3 Install the Revo machined sound suppressor in the reverse of the removal of the OE unit, making sure you correctly refit the circlip.



- 4 Next install the silicone cap onto the end of the machined piece and secure using the supplied hose clamp.

Check everything has been correctly tightened and correctly reinstalled. Test drive to ensure the vehicle performs correctly and there are no leaks/part interference during operation. Your installation is now complete!

