

Fitting Instructions

Revo Intake Upgrade Kit V2 ETR Turbo VAG 2.0 TFSI/TSI MQB

Fitting Difficulty



Dealer Fit Recommended

Contents

Description	Quantity
Revo Intake Hose	1
Revo Intake Hard Pipe	1
Revo Heatshield	1
Revo Air Filter	1
Heatshield Bracket	1
Pipe Bracket	1
Revo Turbo Inlet	1
Breather Adapter	1
O-ring	2
Rubber Grommets	2
90-110 Hose Clamp	1
80-100 Hose Clamp	1
70-90 Hose Clamp	1
25-40 Hose Clamp	1
M6x16 Hex Head Bolt	1
M6x25 Cap Head Bolt	1
M6 Nylock Nut	1
M6 Washer	3

Recommended Tools

Tools	Size
Ratchet	
Extension	
Sockets	7, 10, 13mm
Torx Bits	T30
Hex Key	5mm
Cirolip Pliers	
Flat Head Screwdriver	Small



Before starting, please ensure that the engine is cool and the battery is disconnected. Engine temperatures can remain high for a substantial amount of time after use.



Fitting Instructions

Revo Intake Upgrade Kit V2 ETR Turbo VAG 2.0 TFSI/TSI MQB

Fitting Difficulty



Dealer Fit Recommended

- 1 Remove the OE intake pipe by releasing the hose clamps at the turbo inlet and airbox.



- 2 Disconnect the breather pipe from the turbo inlet.




- 3 Remove the T30 bolt attaching the turbo inlet pipe to the turbo, then twist the inlet pipe and remove.



- 4 Install the new machined Revo turbo inlet. Note: it will only fit onto the turbo one way so align the slots and twist 90° to lock into place.



- 5 Pull the vacuum pipe off the side of the airbox lid and pull upwards on the airbox assembly to release from the rubber grommets, remove from the vehicle.

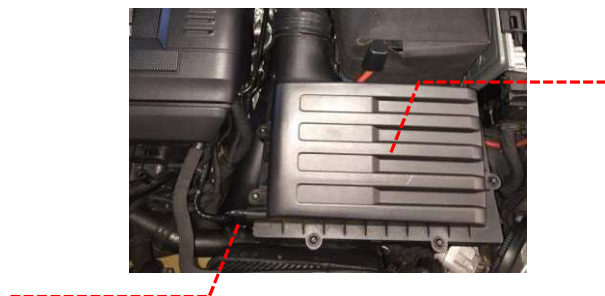

Fitting Instructions

Revo Intake Upgrade Kit V2 ETR Turbo VAG 2.0 TFSI/TSI MQB

Fitting Difficulty



Dealer Fit Recommended

- 6 Insert the breather adapter into the Revo intake hose and secure using the 25-40 hose clamp. Install the Revo intake hose onto the turbo inlet first, then align and tighten using the 70-90 hose clamp.




- 7 Assemble the mini bracket assembly onto the 90-110 hose clamp and attach the pipe bracket, as shown.

Once assembled install the bracket assembly. First remove the bolt, shown in the lower picture, and then use the M6x25 cap head bolt (supplied) to bolt the bracket assembly into position, with the hose clamp fitted around the hose, as shown.



- 8 Attach the heatshield bracket to the Revo heatshield using the M6x16 bolt, 2 x washers and nylock nut. Insert the 2 x rubber grommets into the large holes on the base of the Revo heatshield, as shown.

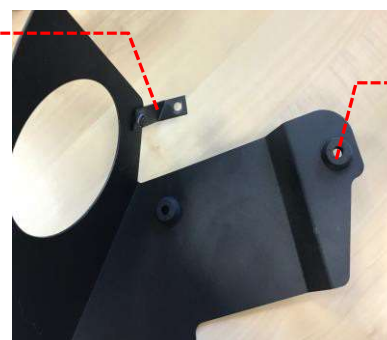

Fitting Instructions


Revo Intake Upgrade Kit V2 ETR Turbo VAG 2.0 TFSI/TSI MQB

Fitting Difficulty




Dealer Fit Recommended

- 9 Remove the M13 bolt from the battery tray, as shown. Then insert the assembled Revo heatshield onto the OE airbox mounts and using the bolt previously removed secure the heatshield bracket to the battery tray and tighten.

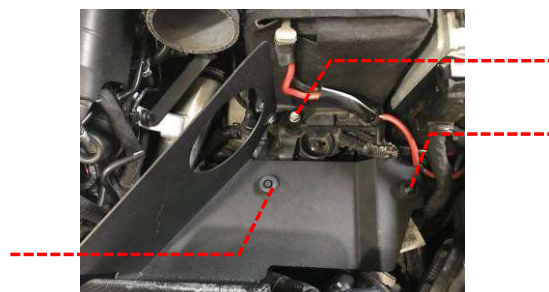

- 10 Install the Revo intake hard pipe and secure using the hose clamp fitted to the Revo intake hose, as shown. Next, attach the Revo air filter using the 80-100 hose clamp (supplied). Tighten the hose clamps to secure. Note: be careful not to damage the Revo hard pipe by overtightening the hose clamps.

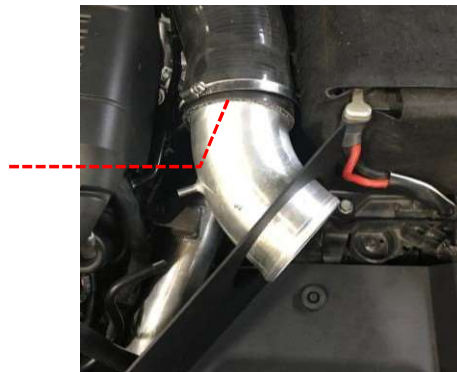

Fit the vacuum pipe to the Revo hard pipe and check that everything is tight and correctly aligned. Test drive the vehicle to ensure vehicle performs correctly and there are no leaks/part interference during operation. Your installation is now complete!



Note: the instructions were produced using development parts. The products supplied may differ from the products shown.