

Fitting Instructions

Fiesta MK8 Rear torque mount kit

Fitting Difficulty



Contents


Description	Qty
Revo Ford Fiesta Rear Mount	1

Recommended Tools

Tools	Size
Socket wrench	n/a
Sockets	15/16mm
Socket extension	n/a
Torx driver/socket	T30
Small flat head screwdriver	n/a
Ramp / Axel stands	n/a
Copper grease	n/a



Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.

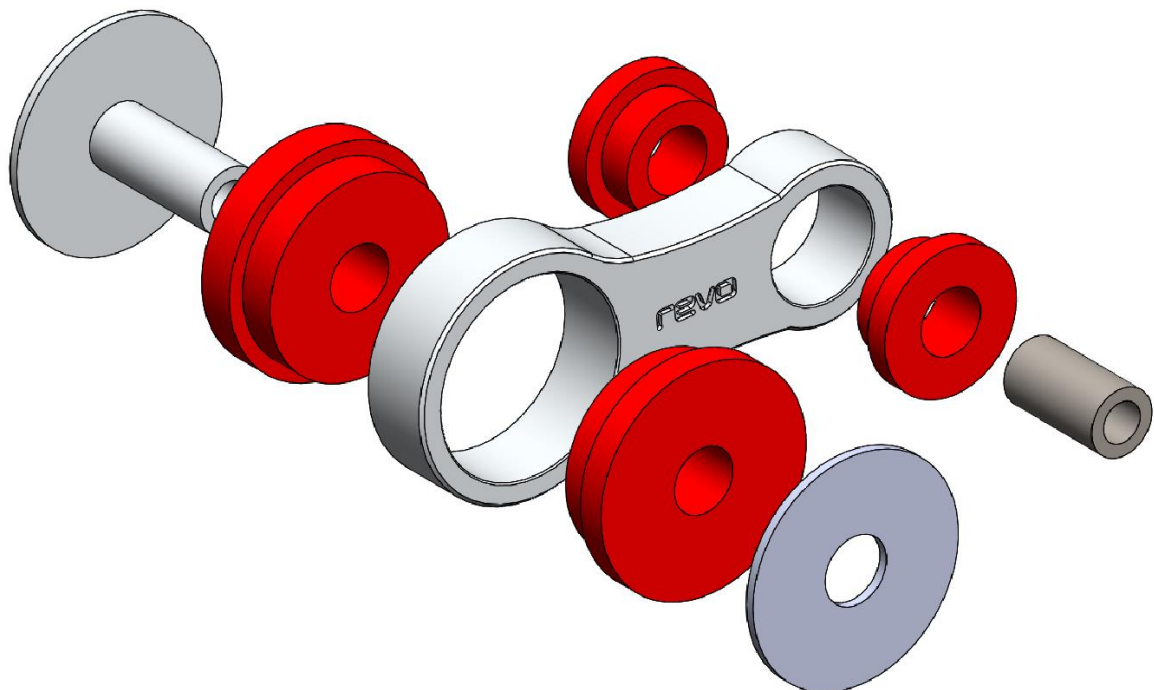


Fitting Instructions

Fitting Difficulty




Fiesta MK8 Rear torque mount kit


- 1 Remove the under tray by removing the 6 x T30 torque screws and 2 x plastic clips.

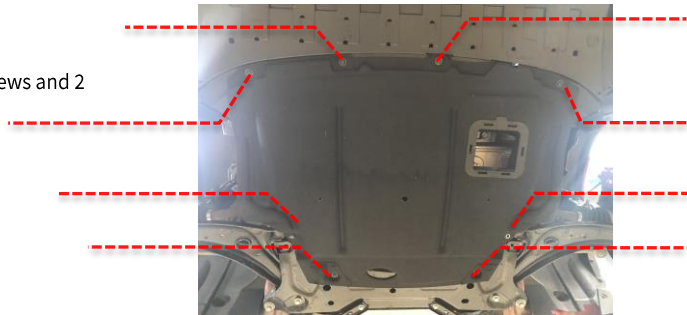

- 2 Remove the OE mount by first removing the rear 15mm bolt (A), then the 16mm front bolt (B). Once both bolts are out the mount should come out freely.
Note: You may want to use a lever bar to help relieve pressure off the bolts during removal.

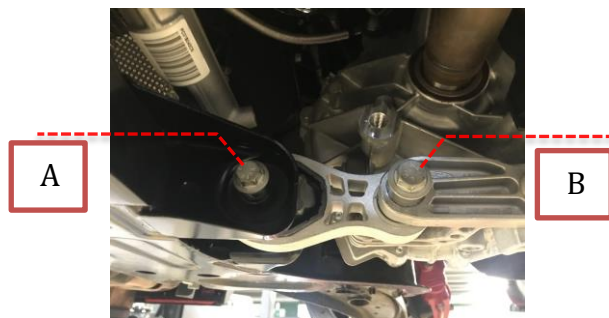

- 3 Next install the Revo mount by first applying some copper grease to the small bushings outer and then inserting into place. Loosely install the 16mm bolt on the front hole and then install the rear section, ensuring you have the large washer on the opposite side to the large pin, again loosely fitting the bolt to start with.

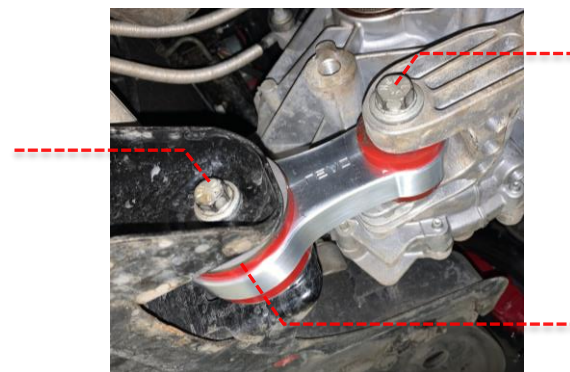

- 4 Finally torque the rear 15mm bolt to 47NM and the front 16mm bolt to 45NM. Re-install your under tray in the reversal you removed it and your installation is now complete.
GO PLAY!

Fitting Instructions

Fitting Difficulty



Fiesta MK8 Rear torque mount kit

NO.	DESCRIPTION	QTY.
1	MK8 Fiesta torque mount body	1
2	MK8 Fiesta Large bush Pin side	1
3	MK8 Fiesta small bush	2
4	MK8 Fiesta torque mount large pin	1
5	MK8 Fiesta torque mount small pin	1
6	MK8 Fiesta Large bush washer side	1
7	MK8 Fiesta Large washer	1

revo	
TITLE: RF061 M500100 Working Instructions	
SIZE DWG. NO. A	REV 02
SCALE: 1:2	SHEET 1 OF 1