

Fitting Instructions

MK3 Focus RS Sound suppressor

Fitting Difficulty



Contents

| Description | Quantity |
|------------------|----------|
| Machined inlet | 1 |
| Silicone cover | 1 |
| 25-40 Hose clamp | 1 |

Recommended Tools

| Tools | Size |
|-------------------------|-----------|
| Ratchet | n/a |
| Socket | 7mm & T30 |
| Circlip pliers | n/a |
| Flast head screw driver | n/a |



Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.




Fitting Instructions

MK3 Focus RS Sound suppressor

Fitting Difficulty



- 1 Raise the car on a ramp (at this point you may find it easier to remove the undertray for better access but its not essential) to remove the undertray there are 8 T30 bolts and 4 plastic clips.

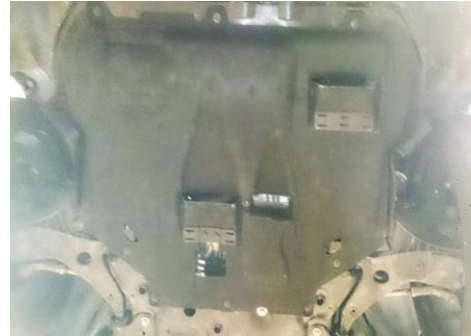

- 2 Remove the circlip with pliers then remove the stock piece from the turbo.



- 3 Install the Revo machined sound suppressor in the reverse of the removal of the stock piece, making sure you re-attach the circlip.



- 4 Next install the silicone cap onto the end of the machined piece and secure using the supplied hose clamp.

Your install is now complete, GO PLAY!

