

# Fitting Instructions

AUDI B9 A4 2.0TFSI 190/252 Turbo muffler delete kit

Fitting Difficulty



## Contents


Description	Quantity
Muffler delete	1
65x2.5 o-ring	1
73x2.5 o-ring	1

## Recommended Tools

Tools	Size
Wrench	n/a
Socket	7mm
Allen key/bit	6mm



Before starting, please ensure that the battery is disconnected and you have ensured the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.

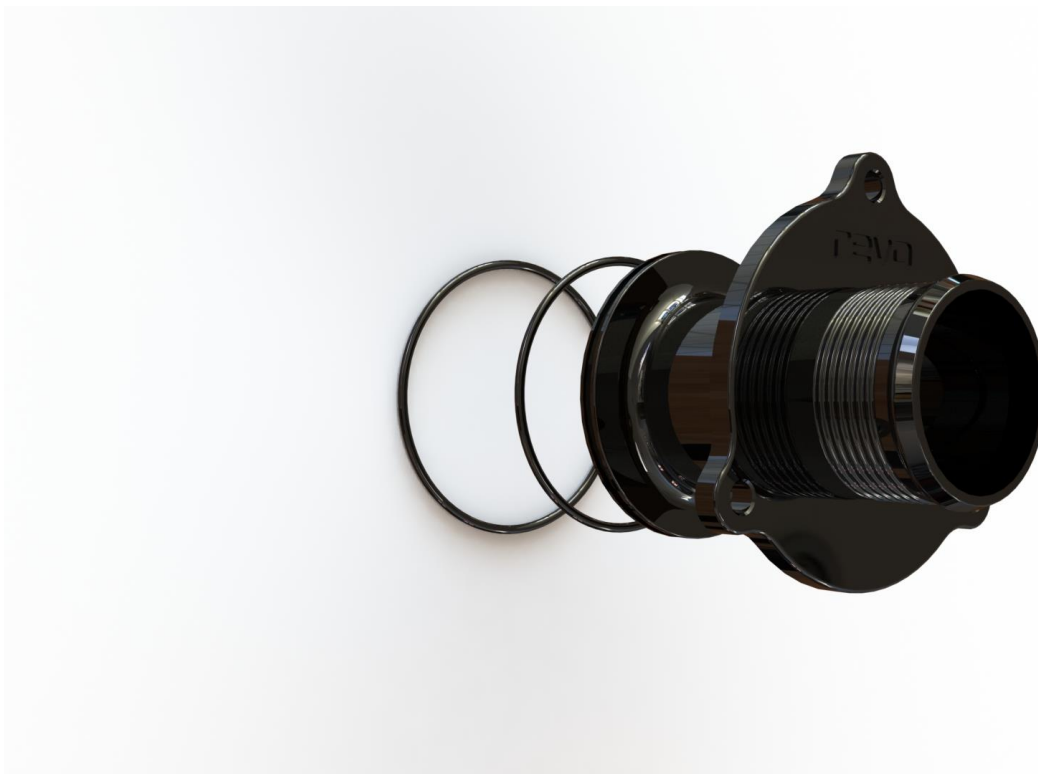


## Fitting Instructions

Fitting Difficulty



AUDI B9 A4 2.0TFSI 190/252 Turbo muffler delete kit

- 1 Firstly jack the car up so you can get to the under tray and then remove by removing the torx screws holding it in place.
- 2 Next loosen the hose clamp securing the charge pipe hose to the OE muffler and pull off.

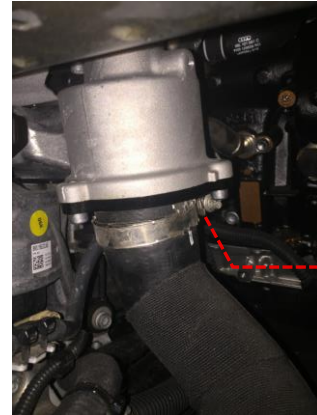

- 3 Remove the three bolts on the muffler and then remove the OE part from the turbo.



- 4 Install the new Revo turbo muffler delete by first inserting the silicone gasket so that it sits flush in the base of the turbo muffler **Note: THIS MUST BE SAT FLUSH IN THE BASE, MAKE SURE YOU DO NOT PUSH INTO THE TURBO OUTLET!**, next install the Revo muffler delete using the bolts you removed from the OE unit. Tighten so everything is secure and then re-assemble the charge pipe and under tray in the reverse of the removal. Ensure all parts are bolt tightened securely

