

Fitting Instructions

2.0/1.8 TSI MQB Turbo muffler delete kit

Fitting Difficulty



Contents

Description	Quantity
Muffler delete	1
65x2.5 o-ring	1
73x2.5 o-ring	1

Recommended Tools

Tools	Size
Wrench	n/a
Socket	7mm
Allen key/bit	6mm



Before starting, please ensure that the battery is disconnected and you have ensured the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.



Fitting Instructions

Fitting Difficulty




2.0/1.8 TSI MQB Turbo muffler delete kit


- 1 First remove your airbox by loosening the hose clamp securing the pipe to the turbo, then lift up on the airbox to remove from vehicle. Picture A is for 2.0/1.8 TSI Golf platform and picture B is for the Polo/S1 platform.



- 2 Next loosen the hose clamp securing the charge pipe hose to the turbo and move so you can get to the muffler.

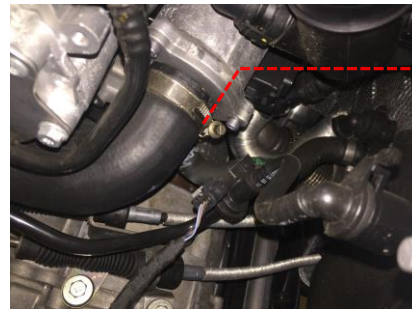

- 3 Remove the three bolts on the muffler and then remove the OE part from the turbo.

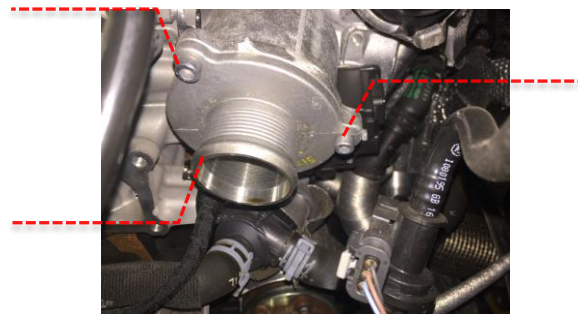

- 4 Install the new 73x2.5 o-ring in place of the OE o-ring on the top face of the housing then install the Revo turbo muffler delete into the housing **Note: ENSURE THAT THE O-RING ON THE BASE OF THE MUFFLER DELETE STAYS SEATED AS YOU SLIDE IT INTO THE HOUSING!** Tighten so everything is secure and then re-assemble the charge pipe and airbox in the reverse of the removal. Ensure all parts are bolted tightened and securely.

