

Fitting Instructions

4.0 TFSI S6/S7 Intake upgrade

Fitting Difficulty



Contents

Contents	Qty.
RS Airbox	1
Air filter	1
Silicon hose 1 (140mm)	1
Silicon Hose 2 (135mm)	1
50-70 Hose clamp	4

Recommended Tools

Tools	Size
Socket wrench	n/a
Socket	7mm



Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.



Fitting Instructions

Fitting Difficulty



4.0 TFSI S6/S7 Intake upgrade

- 1 Remove the engine cover to gain access to the intake hoses.



- 2 Loosen the 4 hose clamps on the two intake pipes using a 7mm socket and remove.



- 3 Unclip the front intake duct from the airbox, then pull up on the airbox to remove from the rubber mountings. Ensure you leave all three of the rubber mountings in place as they will be reused.



- 4 Install the new Revo filter onto the new intake pipe and then clip into the new RS airbox.




Fitting Instructions

Fitting Difficulty



4.0 TFSI S6/S7 Intake upgrade

- 5 First loosely fit the two new silicone hoses to the airbox using the 50-70 hose clamps, make sure you put Silicone 1 (140mm) at the front and silicone 2 (135mm) at the rear. Ensure that you also slide the two remaining 50-70 hose clamps over the silicones then install the airbox by first pushing the hoses onto the inlet pipes and then pushing the airbox onto the rubber mounting points. Next reattach the front intake duct so it clips back inside the airbox mouth. Tighten the 4 hose clamps but make sure you don't over tighten.

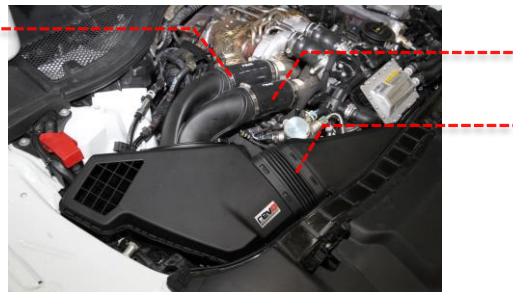

- 6 Check everything is secure and then re-install the engine cover. Your install is now complete. GO PLAY!

