

Fitting Instructions

Fitting Difficulty

Revo 2.0/1.8 TSI MQB Upgraded back pipe kit

Contents

Description	Quantity
Revo upgraded back pipe	1
Machined turbo inlet	1
Aluminium breather pipe	1
70-90 hose clamp	2
25-35 hose clamp	1

Recommended Tools

Tools	Size
Socket wrench	n/a
Socket extension	n/a
Sockets	7mm
Torx bits	T30
Circlip Pliers	n/a




Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.

Fitting Instructions

Fitting Difficulty

Revo 2.0/1.8 TSI MQB Upgraded back pipe kit

- 1 Remove the OE back pipe by loosening the hose clamp at the turbo inlet and the tension clamp on the airbox lid.

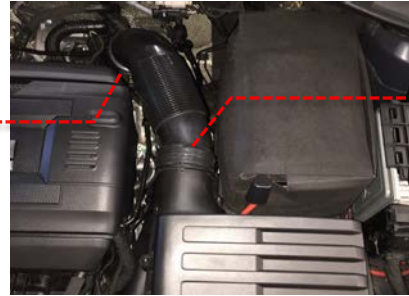

- 2 Disconnect the breather pipe from the turbo inlet pipe.




- 3 Remove the T30 bolt attaching the turbo inlet pipe to the turbo, then twist the inlet pipe and remove from the car.



- 4 Install the new machined Revo turbo inlet. Note: It will only fit onto the turbo one way so you will need to line up the slots on the inlet to the turbo first, once lined up push into the turbo and then twist 90° so it locks into place.



- 5 Insert the aluminium breather adapter into the new hose and secure using the 25-35 hose clamp. Next install the new revo upgraded hose using the two 70-90 hose clamps, start by slipping over the turbo inlet then onto the airbox lid and secure.

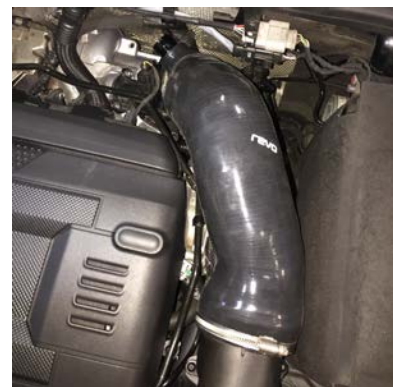

Fitting Instructions

Fitting Difficulty

Revo 2.0/1.8 TSI MQB Upgraded back pipe kit

- 6 Re-attach the vacuum pipe to the machined pipe on the hose and check everything is tight. Your installation is now complete.

GO PLAY!

